



Example of Solder Paste Artwork for TOP side of Board

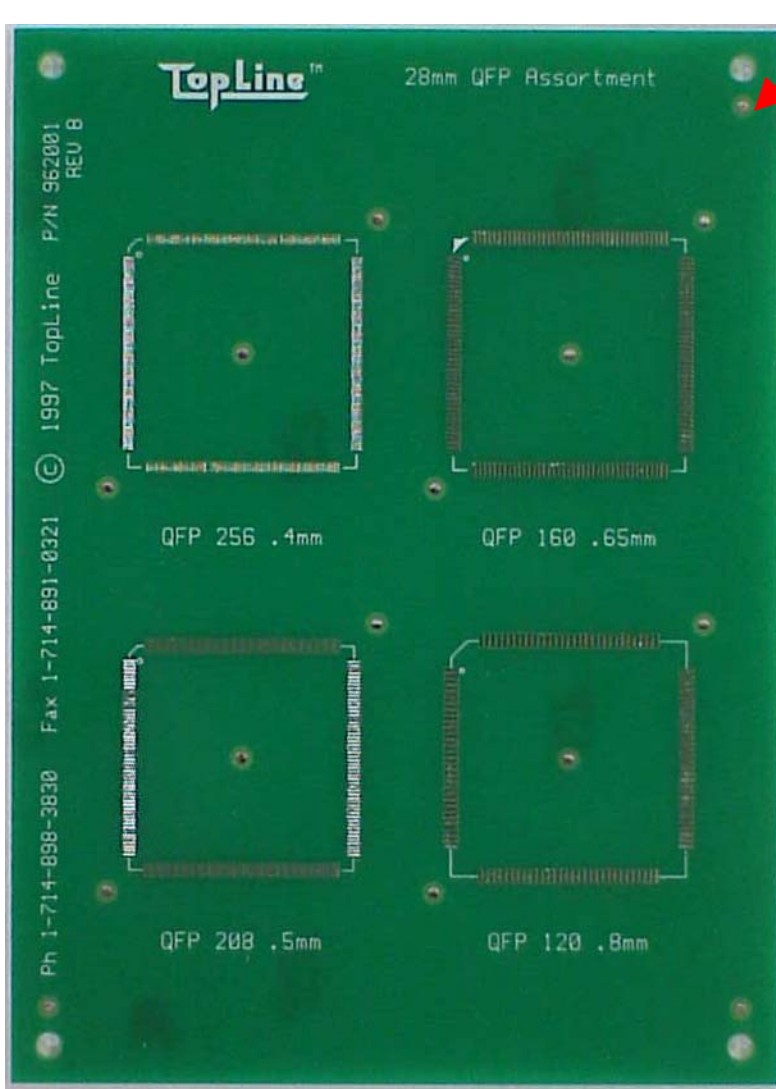

Top Side of board

Fiducial

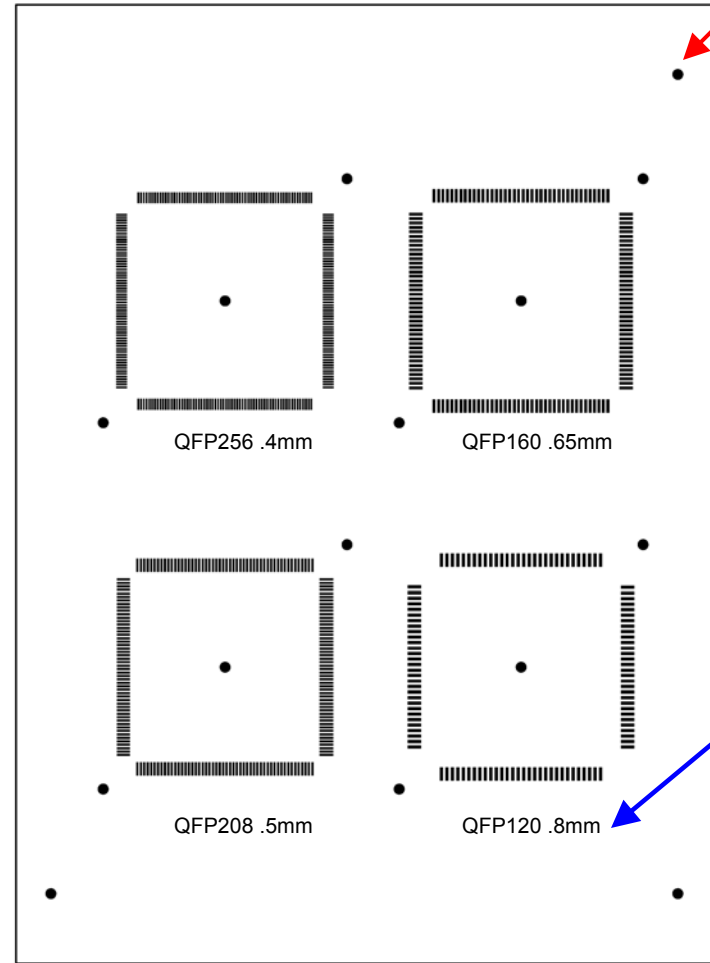

Fiducial For Upper Right Corner Of Board

Note: Solder paste artwork does not have component's legend


(VIEWED FROM COMPONENT SIDE (TOP))

TOPLINE	SCALE 1:1	ORIG CODE XXXX	DWG NO. 962001	REV B	PCB ARTWORK 28mm_QFP ASSORTMEN
11/17/99	LAYER: SDR_PASTE_TOP		SHEET 10 OF X		


Top of Stencil (Squeegee Side)

Example of Solder Paste Artwork for **Bottom** Side of Board

Fiducial

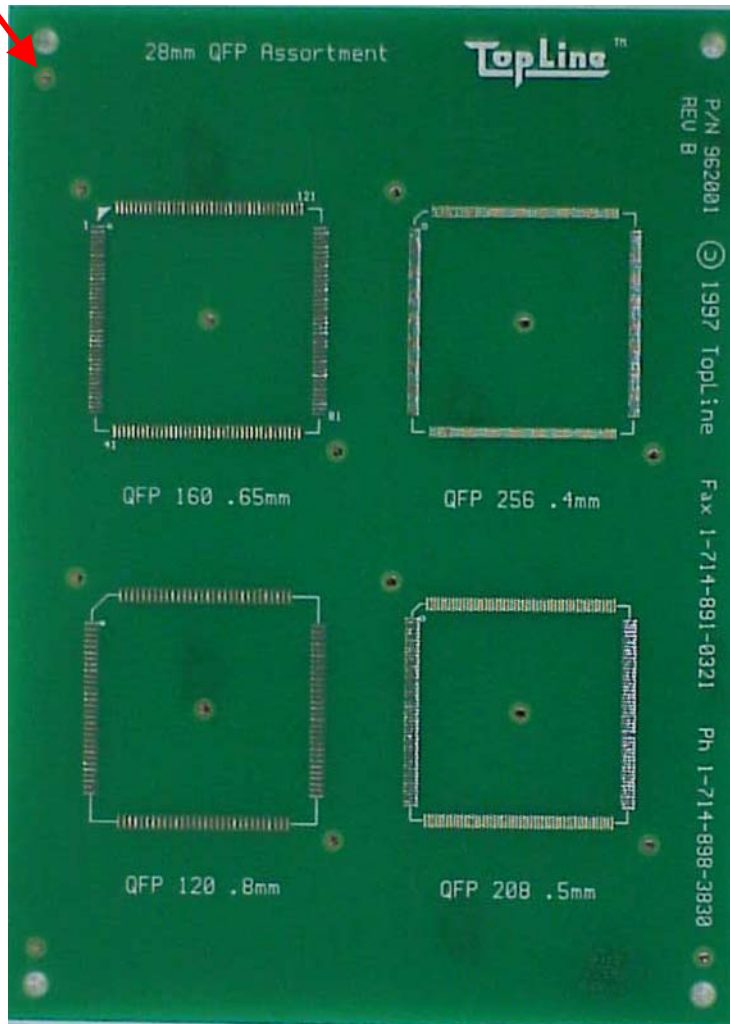

Bottom Side of Board

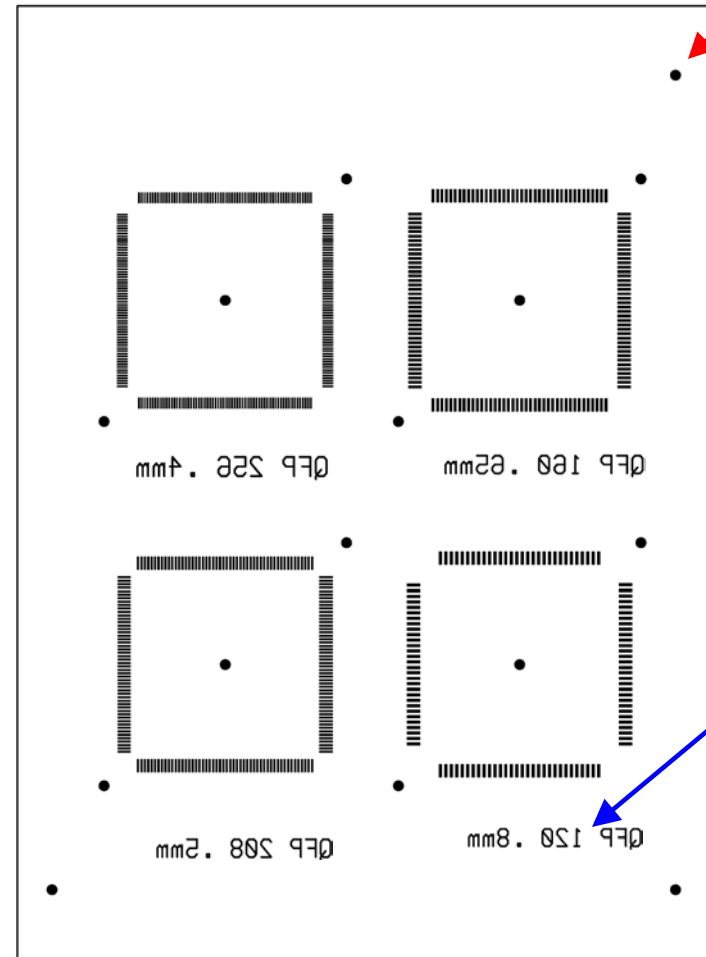

Fiducial For Upper Left Corner Of Board

Note: solder paste artwork does not have component's legend

(VIEWED FROM COMPONENT SIDE (TOP))

TOPLINE	SCALE 1:1	CAGE CODE XXXXX	DWG NO. 962001	REV B	PCB ARTWORK 28mm_QFP ASSORTME
11/17/99	LAYER: TOP_PASTE_BOT		SHEET 11 OF X		

Bottom Solder Paste Artwork must be **flipped** over before making stencil !