



## Board 913001 Multilayer Throughhole

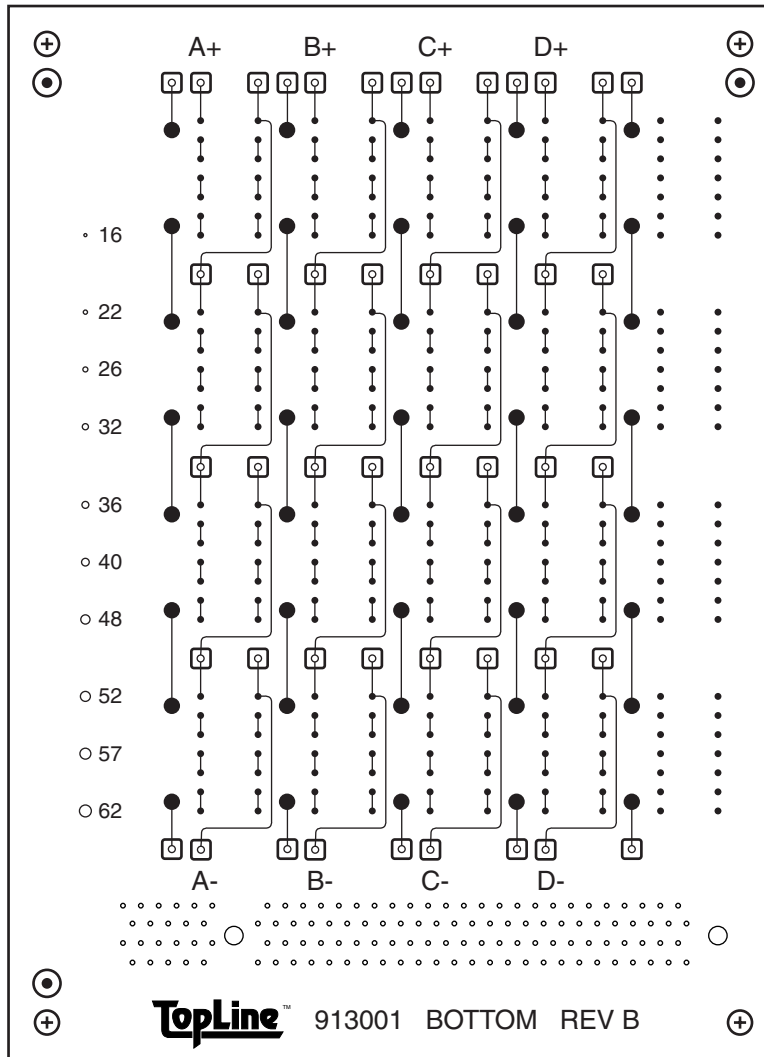

**BOTTOM LAYER**  
**X-Ray View from top side**  
**Legend shown right reading for clarity**

## Board 913001 Multilayer Throughhole

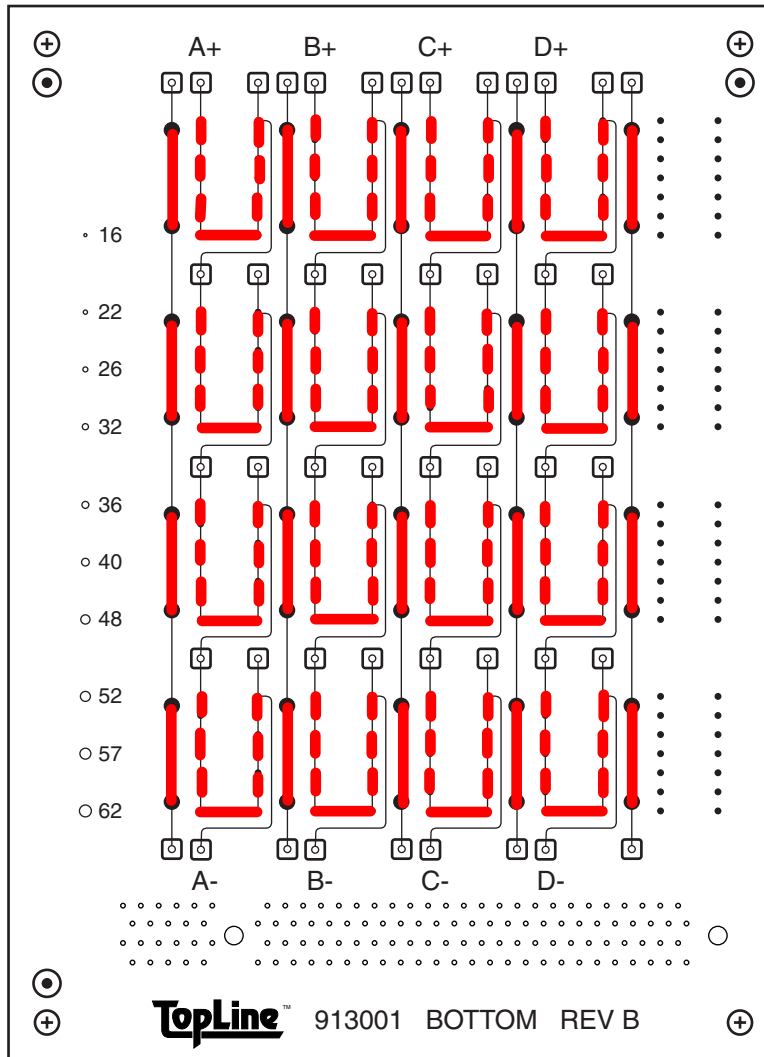

**After Assembly with Test Pads  
Daisy Chain Components  
Measure Zero Ohms for Correct Assembly**